

AIR CONDITIONER SPLIT SYSTEM INSTRUCTIONS

 
B Basic operation

- ① Press **OFF/ON** to start/stop the operation.




Please note that the **OFF** indication is on display to start the unit.

- ② Press **MODE** to select the desired mode.



- ③ Select the desired temperature.

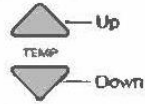

Selection range:
16.0 °C ~ 30.0 °C



Indicator

NOTE:

- * Is power indicator ON
- * Is Timer indicator still ON

- POWER
- TIMER
- POWERFUL
- ECO

To set the timer

2 sets of ON and OFF timers are available to turn ON or OFF the unit at different preset time.

① **Select ON or OFF timer**
Each time pressed:
① → ② → Cancel

② **Set the time**

③ **Confirm**

Example:
OFF at 22:00

OFF OFF 01 0:00

↑ OFF 01 22:00

↓

SET OFF 01 22:00

- To cancel ON or OFF timer, press **ON** or **OFF** to select respective ① or ② then press **CANCEL**.
- If timer is cancelled manually or due to power failure, you can restore the timer again by pressing **ON** or **OFF** to select respective ① or ② then press **SET**.
- The nearest timer setting will be displayed and will activate in sequence.
- Timer operation is based on the clock set in the remote control and repeats daily once set. For clock setting, please refer to Quick Guide.

When...

The remote control is missing or a malfunction has occurred

(CS-RZ25/35/42VKRW, CS-MRZ16/20VKR)



(CS-RZ50/60/71VKRW, CS-RZ80VKR)



1. Raise the front panel.
2. Press the button once to use in AUTO mode.
3. Press and hold the button until you hear 1 beep, then release to use in forced COOL mode.
4. Repeat step 3. Press and hold the button until you hear 2 beeps, then release to use in forced HEAT mode.
5. Press the button again to turn off.